




INSTALLATION INSTRUCTIONS

Installation should be performed by a qualified electrician in accordance with the National Electrical Code and relevant local codes.


MAINTENANCE TIPS

1. Clean lens: Debris must be kept clear from face of fixture. Excessive heat could occur that may harm fixture gasket or create a fire hazard.
2. Check screw tightness and lens cleanliness on a regular maintenance schedule.
3. Use a soda straw to blow debris out of screw holes.
4. Lenses may be soaked in white vinegar to remove lime build-up.
5. Replace gasket if it is cracked, torn, or badly depressed or worn.

INSTALLATION DIAGRAM

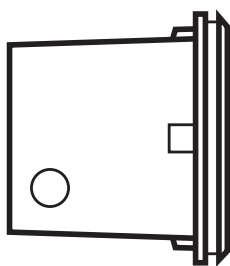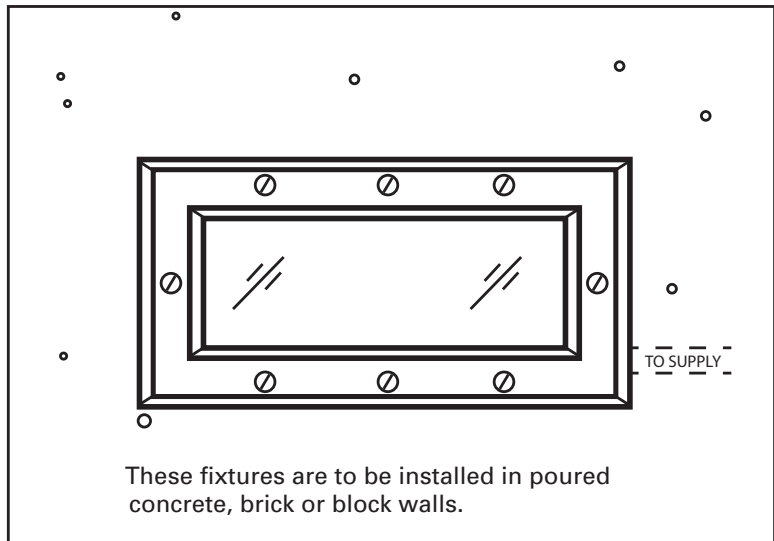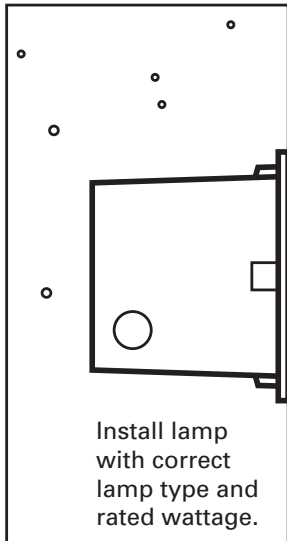

Aluminum models have a protective exterior coating of bituminous paint or epoxy. Should this finish be damaged during installation, any exposed surface must be coated with a similar material.

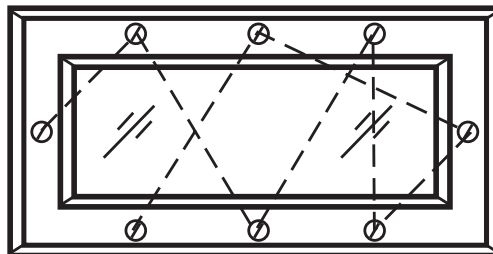

Tighten lamp housing screws using a crisscross pattern to 15 inch pounds (minimum).